

# Brother P-Touch Label Printer

- [Introduction](#)
- [Blue Light Default settings](#)
  - [Cutting](#)
- [Usage](#)
  - [Label patch cables](#)
  - [Label Panels](#)

## Introduction

We are using the P-Touch Label printer to have long-lasting clear labels.

The manual can be found at [http://www.brother-usa.com/VirData/Content/en-US/PTouch/Consumer/UsersManual/UM\\_PT\\_7500\\_7600\\_ENES\\_1616.PDF](http://www.brother-usa.com/VirData/Content/en-US/PTouch/Consumer/UsersManual/UM_PT_7500_7600_ENES_1616.PDF)

Or on Rose at /home/share/resources/Documentation/Manuals/P-Touch\_7600/UM\_PT\_7500\_7600\_ENES\_1616.PDF

The manual is 7.2 MB

## Blue Light Default settings

### Cutting

In order to reduce print cartridge wastage we use the continuous print and cut setting

"Code" + "Z" -> "Cut" -> "3"

## Usage

### Label patch cables

When labeling patch cables we will need to have 2 copies of incremental numbers of the label type "R & Rep"

1. Type the label text, be clear about the part that you want to increment, especially keep in mind how many digits (or letters) you want to increment, for example P-01
2. Choose the label type:  
"LABEL TYP" -> "R & REP" -> Enter -> "BL. LEN." 30.0 mm -> Enter
3. Choose the number of copies and the how many steps you want to increment:  
"CODE" (tiny square LHS bottom display appears) -> "LABEL TYP" -> "COPIES" 2 -> right arrow  
"NUMBER" 10 -> Enter  
"START". Select the rightmost digit or letter you want to have incremented -> Enter  
"END". Select the leftmost digit you want to be incremented (the start-end text will be highlighted) -> Enter  
"CONFIRM" -> Enter
4. Cut firmly when prompted to cut.
5. For the last label to come out, press the "Feed button" (Yellow upper left button)

### Label Panels

To be done